Warranty card

Reclamation is included only with the purchase document Warranty period 2 years Warranty is valid in the event of incorrect installation


NUMBER
TYPE
SALE DATE
INSTALATION COMPANY
PRODUCTION DATE
DEALERS STAMP
AUTHORISED PERSON SIGNATURE



Instalation manual


SGN - wall mounted box

- define location of the box on the wall taking into consideration, pipe route and level of floor
- set box on acurate level so that the level of the floor was on the buttom edge of the box
- box must be leveled and attached to the wall through the holes at the rear wall of the box (A) For mounting use appropriate elements depending on construction of the wall.
- Mount the manifold on the rails (B) at the rear wall of the box. Position of the manifold can be adjusted in horizontal and vertical.

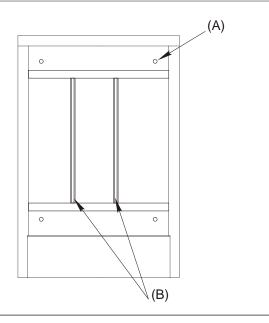

SGP - build in wall box

 - define location of the box on the wall taking into consideration, pipe route and level of floor,
- insert the box to the cavity if necessary supply for manifold can be installed from the side, in this case remove side cover of the box (C), level it and secure, by filling the gap between cabinet and the wall
- Mount the manifold on the rails at the rear wall of the box.
 position of the mnifold can be adjusted in horizontal and vertical
- after instalation, you can monunt frame with doors and compensate all defects beetwen wall and the frame



- define location of the box on the wall taking into consideration, pipe route and level of floor,
- insert the bodyof the box to the cavity if necessary supply for manifold can be installed from the side, in this case remove side cover of the box (C), level it and secure, by filling the gap between cabinet and the wall
- Mount the manifold on the rails at the rear wall of the box.
 position of the mnifold can be adjusted in horizontal and vertical
- after instalation of the body with mask (D), you can monunt frame with doors and compensate all defects beetwen wall, floor and the frame

